



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02



Brochure #63-0084  
© 2002 Edelbrock Corporation

### SIGNATURE SERIES VALVE COVER #4462

**CAUTION:** When using adjustable-type rocker arms, check clearance between rocker arm adjusting nut and valve cover baffle at open and closed valve positions. It may be necessary to modify the baffle.

Rev. 03/02