


INSTRUCTION SHEET
 LEVER KIT - ACCELERATOR LINKAGE
 Chrysler to Holley Double
 Pumper Carburetor

WHERE GREAT IDEAS TAKE SHAPE

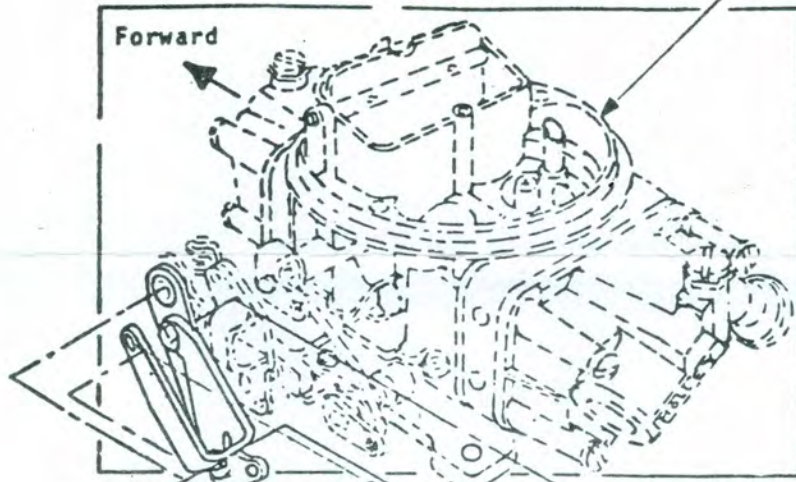

Holley Double Pumper
 Carburetor



Tighten to
 70 in. lbs.

(3)

Accelerator
 Linkage

(6)

(5)

See Note 2

.375"

Existing .250
 Dia. Hole

(1)

(2)

See Note 1

NOTES:

1. Part No. 8021 is for two levers shown.
2. Slot existing .250 dia. hole to dimension shown. Use .250 dia. rat tail file.
3. Assemble as shown and tighten bolts (not nuts) to specified torque.

LIST OF MATERIAL

ITEM	QTY	DESCRIPTION
1.	1	Lever-Part No. 8020
2.	1 ea.	Levers-Part No. 8021 (See Note 1)
3.	1	Hx. Hd. Bolt - .250-28 UNF x .625 long
4.	1	Hx. Hd. Bolt - .250-28 UNF x .500 long
5.	2	Light Helical Lock Washer - 1/4" size
6.	2	Hx. Nut - .250-28 UNF - 2B

Tighten to
 70 in. lbs.

(4)